

## APD30C-RP





30 kVA / 24 kW POWERED by CUMMINS

# DIESEL GENERATING SET 400/230 V - 50 Hz-3 Phase

MODEL			APD30C-RP
Power Pf. 0.8	Standby	kVA	30
		kW	24
	Prime	kVA	27
		kW	21.6

Standby: Continuous running at variable load for duration of an emergency. No overload is permitted on these ratings. In accordance with ISO 3046.

Prime: Continuous running at variable load for unlimited periods with 10% overload available for 1 hour in any 12 hour period. In accordance with ISO 8528,ISO 3046.

- ✓ High quality, reliable and complete power unit
- ✓ Compact design
- ✓ Easy start and maintenance possibility
- ✓ Every generating set is subject to a comprehensive test program which includes full load testing, checking and provision of all control and safety shut down functions testing
- √ Fully engineered with a wide range of options and accessories: Canopy, sound proof canopy and on-road trailer









# **ENGINE**

CUMMINS						
Model		4B3.9G2				
Engine Power Output	kWm	27				
at rated rpm	HP	36				
Aspiration and Cooling		Natural				
Total Displacement	Litre	3.9				
No. of Cylinders and Build		4- Inline				
Engine Speed	rpm	1500				
Bore and Stroke	mmxmm	102x120				
Compression Ratio		18:1				
Governor		Electronic				
Fuel Consumption at full load	L/hr	6.7				
Fuel Tank Capacity	Litre	Canopy: 330				
Oil Capacity	Litre	10.9				
Coolant Capacity	Litre	19.2				
Radiator Cooling Air	m³/min	120				
Air Intake – Engine	m³/min	1.98				
Exhaust Gas Flow	m³/min	4.26				
Sound Level(1M)	dBA	77				
Sound Level(7M)	dBA	65				

- √ Heavy duty Cummins diesel engine
- ✓ Four stroke, water cooled, natural
- ✓ Direct injection fuel system
- ✓ Electronic Governor system
- √ 12/24 V D.C. starter and charge alternator
- ✓ Replaceable fuel filter, oil filter and dry element air filter
- Cooling radiator and fan
- Starter battery (with lead acid) including Rack and Cables
- Flexible fuel connection hoses and manual oil sump drain valve
- Industrial capacity exhaust silencer and steel bellows
- Jacket water heater(at automatic models)
- Operation manuals and circuit diagram documents

# **ALTERNATOR**

Design	Brushless single bearing, revolving field
Stator	2/3 pitch
Rotor	Single bearing, flexible disc
Insulation System	Class H
Standard Temperature Rise	125 - 163°C Continuous
Exciter Type	Self Excited
Phase Rotation	A (U), B (V), C (W)
Alternator Cooling	Direct drive centrifugal blower fan
AC Waveform Total Harmonic Distortion	No load < 1.5%. Non distorting balanced linear load < 5%
Telephone Influence Factor (TIF)	<50 per NEMA MG1-22.43
Telephone Harmonic Factor (THF)	<2%

- ✓ Brushless, single bearing system, flexible disc, 4 poles
- ✓ Insulation class H
- ✓ Standard degree of protection IP21 (\*IP22/IP23 is available.)
- ✓ Self-exciting and self-regulating

- ✓ Impregnation with tropicalised epoxy varnish
- ✓ Solid state Automatic Voltage Regulator
   ✓ Stator winding with 2/3 pitch for improved harmonics

## **CONTROL SYSTEM**

Control supervision and protection panel is mounted on the genset base frame. The control panel is equipped as follows:

Generator kVA

Generator kW

Generator Cos (σ)

### 1. Auto Mains Failure Control Panel

Panel equipments:

- ✓ Control with AMF module
- √ Static battery charger
- ✓ Emergency stop push button

### a) Generating set control module DSE 6020 features:

- √ The module is used to monitor main supply and starts and stops of a standby generating set
- ✓ Micro-processor based design
- ✓ Automatic control of main and generator contactors
- ✓ Monitors engine performance and AC power output LED alarm indication
- ✓ Front panel configuration of timers and alarm trip points
- ✓ CAN and magnetic pick-up versions(specify on ordering)
- √ 4 digital inputs/3 analogue inputs
- ✓ 6 outputs(4 configurable on Magnetic Pick-up, 6 configurable on CANbus version)
- ✓ Easy push button control
  - STOP/RESET MANUAL AUTO TEST START

### b) Metering via LED display:

- ✓ Generator Volts (L-L / L-N)
- ✓ Engine oil pressure (PSI-Bar)
- ✓ Generator Ampere (L1,L2,L3)
- ✓ Engine temperature (° C&° F)
- ✓ Generator Frequency (Hz)
- ✓ Plant battery volts
- ✓ Engine hours run
- ✓ Mains Volts (Ph-Ph/Ph-N)

# c) Alarms: ✓ Over and

- Over and Under Speed
- ✓ Low and High Battery Volt.
- ✓ Start and Stop Failure
- ✓ Charge fail
- ✓ Over Current
- ✓ Under / Over Generator Voltage
- √ Low Oil Pressure
- ✓ Emergency stop
- ✓ High engine temperature

### d) LED indications

- √ Mains available
- ✓ Generator available
- ✓ Mains on load
- ✓ Generator on load

# 2. Power Outlet Terminal Board Mounted on the Gen-set Base Frame

## **OPTIONAL EQUIPMENTS**

### **Diesel Engine**

✓ Oil heater

#### **Alternator**

- √ 3/4 Pole Output Circuit Breaker
- ✓ Anti-condensation Heater

#### **Panel**

- ✓ Charge ammeter
- ✓ Transfer Switch 3Pole
- ✓ Transfer Switch 4 Pole
- ✓ Earth Fault ,single set

### Accessories

- ✓ Bulk fuel tank
- ✓ Automatic filling system
- ✓ Fuel-water separator filter
- ✓ Low fuel level alarm
- √ Residential silencer
- ✓ Enclosure or sound proof canopy
- ✓ Trailer
- ✓ Manual oil drain pump
- √ Tool kit for maintenance

**DSE 6020** 




# **CHASSIS**


- √ The complete gen-set is mounted as whole on a heavy-duty fabricated, steel base frame
- ✓ Anti-vibration pads are fixed between the engine/ alternator feet and the base frame
- ✓ Base frame design incorporates an integral fuel tank (Up to 750 kVA)
- The generating set can be lifted or carefully pushed / pulled by the base frame
- ✓ Dial type fuel gauge and drain plug on the fuel tank
- ✓ Forklift pockets within base frame (up to 500kVA)

## **DIMENSIONS**

OPEN TYPE						
DIMENSIONS (LxWxH)	mm	N/A				
DRY WEIGHT	kg	N/A				
DIMENSIONS (LxWxH)	mm	2000 4000 4700				
DIVILIAGIONS (EXVIXII)	111111	2800x1020x1729				
DRY WEIGHT	kg	1500				

# **CANOPY**

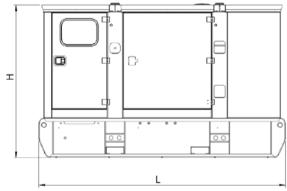



- All canopy parts are designed with modular principles
- Without welding assembly
- ✓ Doors on each side
- All metal canopy parts are painted by electrostatic polyester powder paint
- Exhaust silencer is protected against environment influences
- Thermally insulated engine exhaust system
- Emergency stop push button is installed outside of the canopy
- Easy lifting and moving
- ✓ Easy maintenance and operation